BAIT TANK AND GENERAL PURPOSE PUMPS SERVICE PARTS

KEV # DESCRIPTION


- 0 Service Kit*
- 1 Upper Housing with Clips
- 2 Check Valve Assembly
- 3 Diaphragm Assembly (Includes screws)
- 4 Lower Housing Assembly
- 5 Motors
- 6 Poris 75HB (2)

Ports - Garden Hose (2)

- 7 Pump Head Assembty
- 8 Side Clips (pair)

ACCESSORIES

QUICK CONNECT PORT SYSTEM

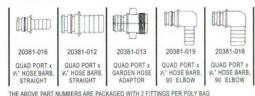


STRAINERS


Inlet	Outlet	Screen
¾ Barb	¾ Barb	40 Mesh
3/4 Barb	3/4 Barb	40 Mesh
₃⁄₄ Barb	3/4 Barb	40 Mesh
¾ Barb	¾ Barb	40 Mesh



FEATURE'S

- Self-Priming
- · Soft, Noise Absorbing Mounts
- · Corrosion Resistant Materials
- with Thermal Overload Protection

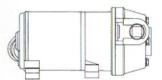

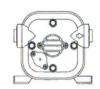

SPECIFICATIONS

Motor: Permanent Magnet,Ball Bearings on both Front and Rear Endbells. CE Models are fully suppressed.

Pump: Fiyr chamber positive displacement diaphragm design; Self-priming up to 6 ft.suction lift; Pump able to run dry without damage; Removable port to hose connectors.



ECHNICAL	DATA	
		_

TYPE	Volts (V)	AMP (A)	Flow Rate (l/min)	Max. Pressure (PSI)
FL-30	12	2.2	10	17
FL-31	24	1.5	10	17
FL-35	12	3.9	12.5	35
FL-34	24	2	12.5	35
FL-33	115	0.5	12.5	35
FL-32	220	0.4	12.5	35
FL-40	12	6	17	40
FL-44	24	2.5	17	40
FL-41	115	0.5	17	40
FL-43	220	0.4	17	40

^{*} CE fully suppressed models are identified by a prefix"R"and a CE mark on the label (i.e.R4105-501). Self Declaration Of Conformance(SDOC)is available upon request.

OPERATION

Your "Quad II" bait tank pump is designed to selfprime up to 6 feet suction lift and fill your tank in 8-12 minutes. This allows 5 to 6 water changes perhour. If pump fills tank in less than 8 minutes divert excess water by installing a T or Y valve. Reduce turbulence by adding additional inlet at water line or drill out multiple stand pipe hples so water does not spurt out of holes. Your lively bait need calm, fresh water.

This pump is quiet running. It is recommended you utilize a "lighted" on-off switch so that the pump is turned off when not in use. The "Quad II" is able to run

dry(no liquid)for exfended periods with no damage to the pump. However, this could cause needless battery drain.

For general purpose or diesel teansfer,plug in your choice of ports and lock in with slide clips. Attach hoses and wiring.

For portable use we recommend the pump be attached to a base(ie. 3/4"X8"x10"board or plywood), add a toggle switch, a length of two conduictor cable with alligator clips for battery connection.

^{*} Service Kit includes #2, #3, #8 and drive cam assembly.